





**INSTALLATION INSTRUCTIONS**


#1 Mount faceplate or housing to wall.

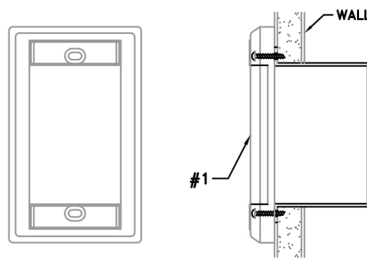


#2 Bring all cables through plate or box openings.

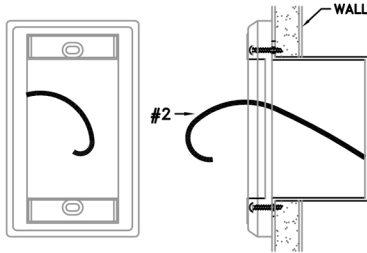

#3 Support module in plate or on flat surface, terminate all cables. (ref. other side of this instruction).

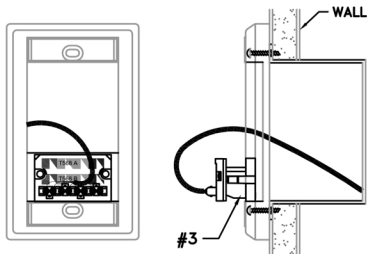


#4 Reverse modules and snap into faceplates or boxes.

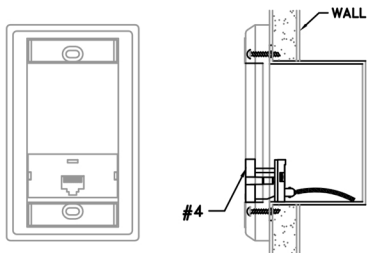

Note: The use of a service loop above the ceiling or in a wall should be used to minimize excess cable storage in the outlet box.


Choose T568A or T568B wiring and follow instructions below.

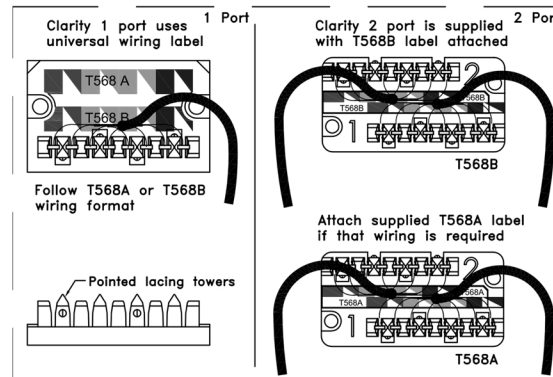


**TERMINATION INSTRUCTIONS**

1. Bring cable through plate or box openings. (ref other side of this instruction).
2. Remove 2" of jacket, center jacketed cable in middle of 110D-4.
3. Maintain pair twist as close as possible to point of termination, untwisting not to exceed 1/2" (13mm), (Use pointed towers to separate conductors of pairs).
4. Wire per color code instructions. Punch down with trimming blade and apply caps.

Note: The minimum required depth of the wall outlet is 1.50".

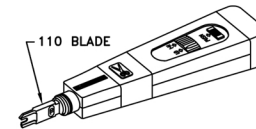

RECOMMENDED TERMINATION TOOL  
OR-60300005 (TOOL & BLADE)  
OR-60300006 (BLADE ONLY)



RECOMMENDED STRIPPER TOOL  
OR-60300032 (TOOL)

**Show Me**  
CABLES

an INFINIT® brand

www.showmecables.com  
888-519-9505 | sales@showmecables.com

Title

Ortronics Clarity 6 Series II One Port- Off White

Part Number

S21600

Notes

1. Unless otherwise specified all dimensions are nominal
2. All specifications are subject to change without notice at any time
3. Dimensions are in millimeters